

Frigbot Ultracella Smart Cable

Installation instructions:


Step 1

Configure Ultracella for
Modbus communications

Press and hold [PRGM]
Arrow up to set password = 22 [SET]
Arrow up to to select CNF [SET]
Arrow up to H7 = 1 [SET]
Arrow up to H10 = 4 [SET]
Arrow up to H11 = 2 [SET]
Arrow up to H12 = 0 [SET]


Step 2

Connect the single red wire to pin
43 on carel ultracella

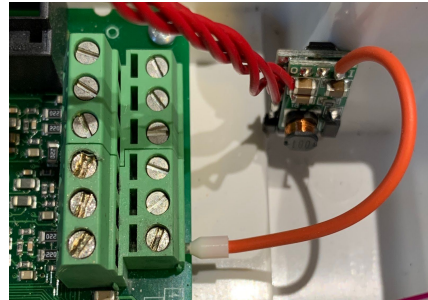

Step 3

Connect the 2 pin header to pins
52, 53, 54 on carel ultracella

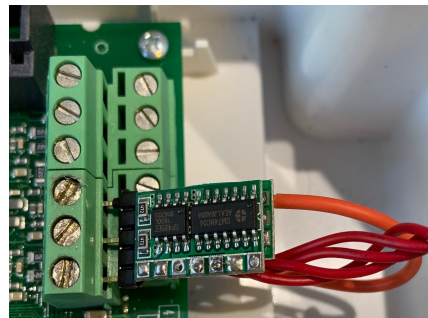

Step 4

Connect the other end of smart
cable to your Frigbot

